


Assembly Instruction HoloBox





The HoloBox consists of the following parts:

- box (material wood/plastic coating)
- adapter with audio equipment
- projector ramp
- HoloPro™ 50" screen (1.040 mm X 1.890 mm)
- special reflector screen

1. The adapter and the audio equipment can be loosened by lifting up and can then be removed. The 4 screws (13 mm across) can then be loosened.
Do not remove the screws entirely!
2. Carefully place the HoloPro™ screen into the open slot in the box from the side, making sure the glass support faces downward. The marking on the picture surface should be on the top left from the viewer's perspective!
Make sure that the screen is not tilted when being positioned!
3. The screws can now be retightened. Make sure they are not too tight, because it could damage the screen!
4. Now open the doors using the enclosed wrench key. There are another 4 screws on the back wall inside the box. Loosen these as described above and place the special reflector screen in the allocated slot. The pane of glass should be facing the HoloPro™ screen. There is a groove below the reflective surface in the back side. Be sure not to tilt the screen during insertion. Now retighten the screws. Again, not too tight or the mirror could be damaged!
5. If the projector has not been mounted yet, remove the projector ramp by the front of the box. To do this the screws need to be loosened. The projector should be lifted from the front of the box and pulled forward. 3 or 4 M4 setscrews should be screwed in the projector from the bottom in the allocated threads. Afterwards place the projector in the appropriate holes in the projector ramp and screw it on from the bottom using the enclosed nuts. After the ramp is inserted, the projector's lens must face the front of the box. Be sure that the ramp is snapped into the appropriate holes.
6. All of the mains plugs in the box should be inserted into the plug strip and the strip should be turned on.
7. Now connect the projector with the signal source and turn it on (see the operator's manual for the projector).
8. Adjust the picture as needed so that it best fits onto the HoloPro™ screen. The picture can be adjusted on the screen using the projector's zoom and focus knobs, and the picture's edges can then be corrected using the keystone setting in the projector menu. The digital shift in the projector menus for the Sharp PG-C30 and XG-P10 should be set at zero. There are two knurled screws on the small mirror inside the HoloBox. The picture can be accurately adjusted by turning these screws.
9. Finally, the adapter with the audio equipment should be remounted. Be careful that no wires are being clamped by the audio system. Connect the audio system with the network and the signal source. Adjust the volume using the volume control knob. These can be found under the flap at the top of the adapter.

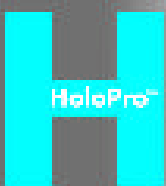

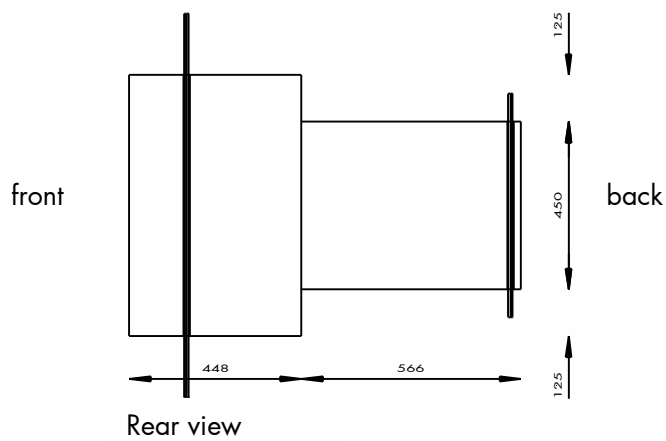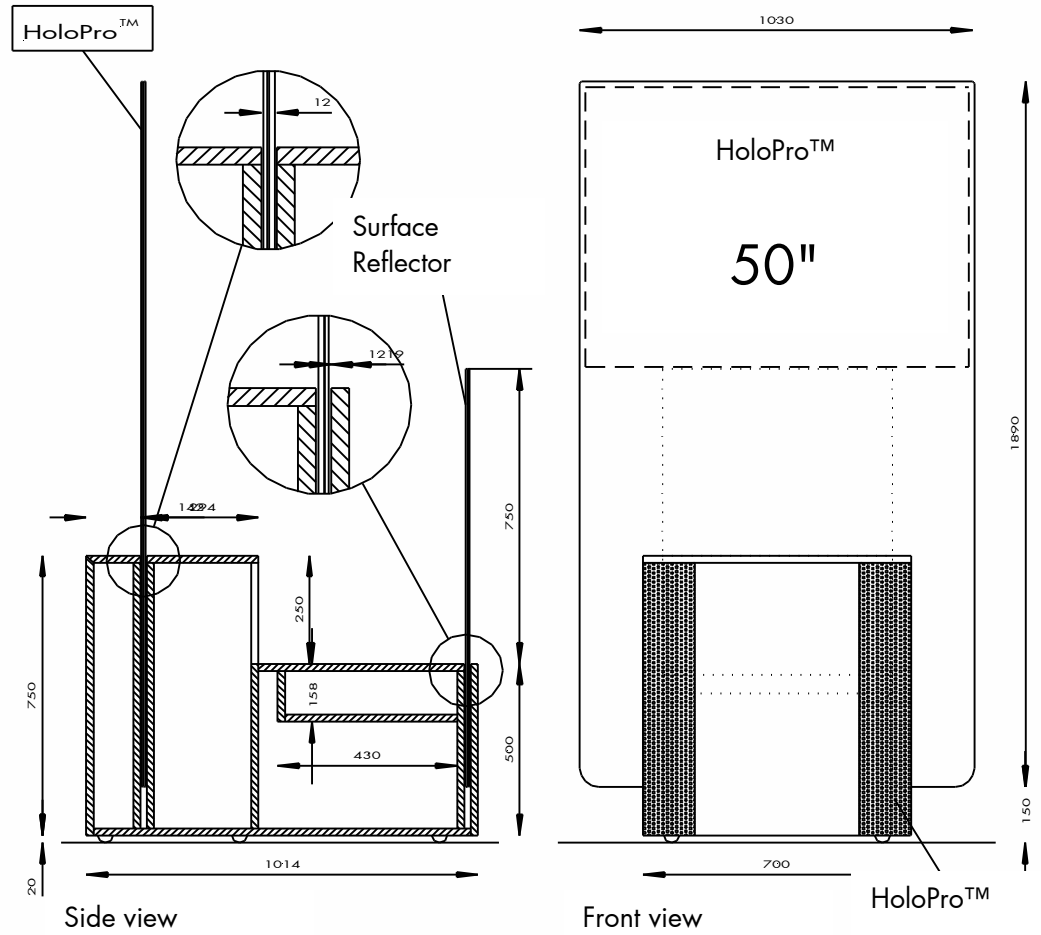

Safety Instructions

When installing HoloPro™ the following has to be taken into account:

1. The installation is only allowed to be carried out by pronova or trained personnel of the authorised dealers.
2. The installation of HoloPro™ screens should be carried out by two persons.
3. HoloPro™ should only be transported in the original flight case, in order to avoid damage.
4. HoloPro™ corners are ground. They can splinter if they are put down too Loudspeaker subjected to - too much burden at particular points. This can cause cut injuries.
5. HoloPro™ screens should only be handled with sweat-proof gloves. If this is not possible, the fingerprints which occur must be removed immediately, in order to avoid damage to the anti-reflection layer.
6. Abrasive substances or blades are not allowed to be used for cleaning the screen.
7. When mounting on the ceiling the projector must be doubly secured (chains, catch hooks).
8. The inlet and outlet ventilation slits of the projector are not allowed to be covered up (see operating instructions of the projector).

Improper use of the accessories can lead to injuries or cause HoloPro™ to fall down. In the case of incorrect usage or failure to observe the safety instructions and assembly instructions, pronova shall recognise no liability whatsoever on its part.

